

Hisense

air conditioner

remote controller

manual



SMART(invalid for some models)

Used to enter fuzzy logic operation directly, regardless of the unit is on or off.

POWER

The appliance will be started when it is energized or will be stopped when it is in operation, if you press this button.

SUPER

Used to start or stop the fast cooling/heating. (Fast cooling operates at high fan speed with 16°C (61°F) set temp automatically ; Fast heating operates at auto fan speed with 30°C (86°F) set temp automatically)

IFEEL

Used to set IFEEL mode operation. Press it once, the IFEEL function will be started. Press it again, the IFEEL function will be shut off.


SWING(invalid for some models)


Used to stop or start vertical adjustment louver swinging and set the desired up/down airflow direction.

CLOCK

Used to set the current time.

QUIET (invalid for some models)

Used to set or cancel Quiet Mode operation. When the air conditioner is in standby, and the mode of remote controller is in Cooling or Dry (except Super mode), press this button for about 5 seconds once to start Clean mode , then the indicator “” will display on LCD.

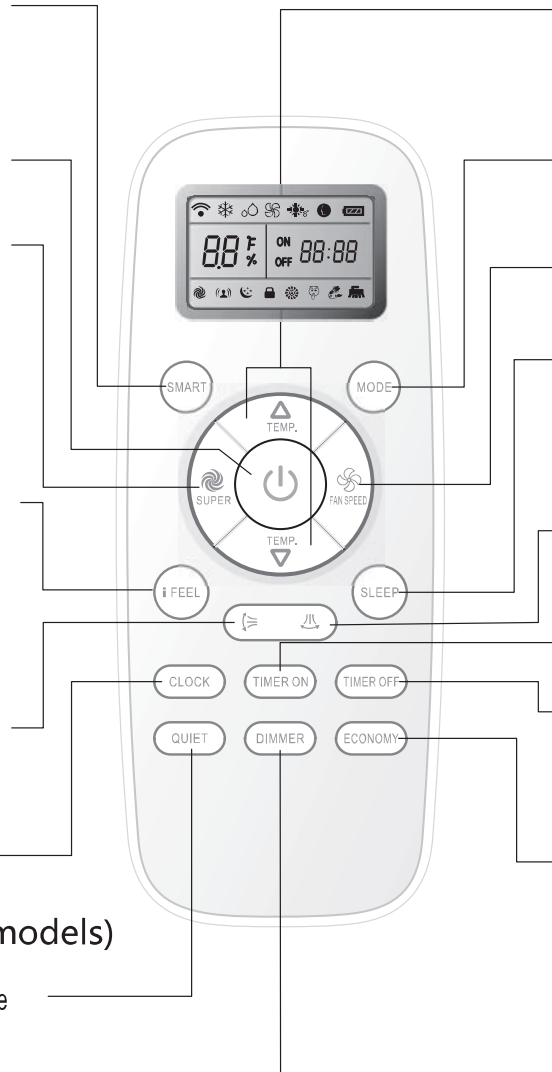

TEMP + -

Used to adjust the room temperature and the timer, also real time.

MODE

Press this button to select the operation mode.

FAN

Used to select fan speed in sequence auto, higher, high, medium, low or lower.

SLEEP

Used to set or cancel Sleep Mode operation.

SWING(invalid for some models)

Used to stop or start Horizontal adjustment louver swinging and set the desired left/right airflow direction.

TIMER ON

Used to set or cancel the timer operation.

TIMER OFF

Used to set or cancel the timer operation.

ECONOMY (invalid for some models)

Used to set or cancel Economy Mode operation.

When in Cooling mode (except Super mode), press this button for about 5 seconds once to start Power control mode , press this button for about 5 seconds once again to stop it

DIMMER (invalid for some models)

When you press this button, all the display of indoor unit will be closed. Press any button to resume display.
















 



 
 
 



TIMER ON + TIMER OFF LOCK

Used to start or stop LOCK mode.

TEMP. + SWING 8°C HEAT(optional)

Used to start or stop 8°C HEAT mode

Indication symbols on LCD:

	Cooling indicator		Auto fan speed		Sleep 1 indicator		Quiet indicator		Signal transmit
	Dry indicator		Higher fan speed		Sleep 2 indicator		Smart indicator		Battery power indicator
	Fan only indicator		High fan speed		Sleep 3 indicator		Economy indicator	ON 88:88	Display set timer
	Heating indicator		Medium fan speed		Sleep 4 indicator		Super indicator	OFF 88:88	Display current time
	8°C Heat indicator		Low fan speed		Lock indicator		Ifeel	88 F	Display temperature
	Lower fan speed				Clean indicator		Clean indicator	%	Power control indicator