



# Hob Instruction Manual - Arieli AE-321FS

## Overview

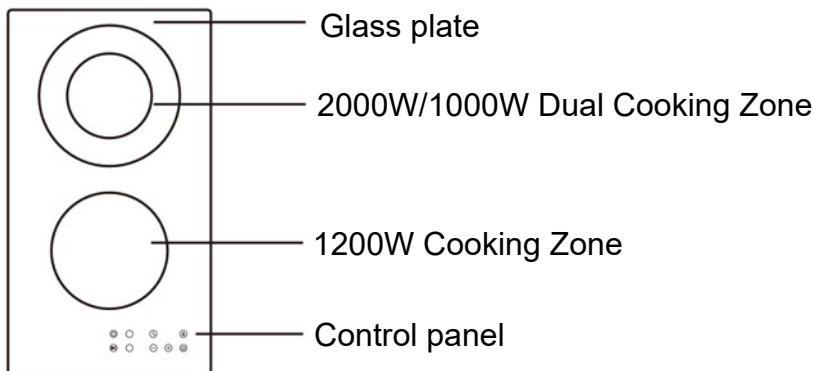


## Touch Controls

- The controls respond to touch, so you don't need any pressure.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object covering them.

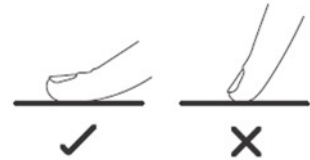

## Control panel

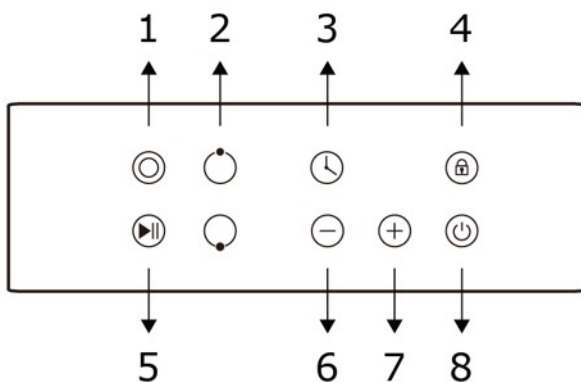

1. Extended zone control button
2. Cooking Zone selection button
3. Timer control button
4. Child Lock control button
5. Stop & Go control button
6. Heating level/Timer "-" button
7. Heating level/Timer "+" button
8. ON/OFF button

## Using your Hob

### Start cooking

1. **Tern on the hob** by pressing and hold the ON/OFF button for about 3 seconds, till you hear a "beep". Now the hob enter into Standby mode, all heat setting indicators and Timer setting indicators shows "-".
2. Place a suitable pan on the cooking zone that you wish to use.
  - Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.
3. **Select and active the cooking zone** you wish to use by touching the Cooking zone selection button.
4. **Set Heating level** by touching the Heating level button, and adjust the heat level. If press and hold either of the two buttons, the value will adjust down or up rapidly, from 0 to 9 in circle.



### Turn off hob

1. You can **turn off the cooking zone** by touching the Heating level button "-", and adjust heat setting to level 0, which indicator shows "-".
2. You can also turn the whole hob off by touching the ON/OFF button.



## Using Extended Heating Area

1. Touch the "cooking zone selection button" (this with the extended heating area) to select and active it for adjustment.
2. The central cooking zone will be switched on, when first adjust of heat level for extended cooking zone.
3. When the cooking zone be selected and active (power level indicator flashing), touch "extended zone control button" to active extended cooking element to get a large heating area.



## Stop & Go function

The "Stop & Go button" can turn off all zones. With one more touching of the button, hob restarts where they were.



1. **To active Stop & Go function**, press the Stop & Go button once. Then all programmer setting be hold on and hob stop heating, all heat setting indicators show "P".
2. **To Inactive Stop & Go function**, you can press the Stop & Go button again. Then all programmer setting will return to where they were.

**Note 1** : When Stop & Go function is active, all control buttons are disable except the ON/OFF and Stop & Go buttons.

**Note 2** : The hob will auto turn off, if Stop & Go function last more than 10 minutes.

## Child Lock Safety Control

You can lock the controls to prevent unintended use by active "child lock control button".



1. **To lock the controls** Touch the "Child Lock control button" once . The timer indicator will show "Lo", and Child Lock function be active.
2. **To unlock the controls**, Touch and hold the "Child Lock control button" for 3 seconds, the buzzer beeps once and "Lo" disappears in timer indicator, the Child Lock be inactive, and you can now start using your electric hob.

**Note 1**: When the controls are locked,all controls button be disable except the ON/OFF button and child lock button.




**Note 2**: Under Child Lock function, if turn the hob off without inactive the Child Lock function. When turn on the hob later, the Child Lock function will still valid.

## Using the Timer





When the hob is turned on, you can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn either or more than one cooking zones off.

### Using the Timer as a Minute Minder

1. Touch the timer control button, the number in timer indicator flashing. 
2. Then adjust Minute Minder setting by touching the "+" or "-" buttons.  
3. When the minute minder is set, it will begin to count down immediately, the display will show the remaining time.
4. When the setting time finished, buzzer will beep for 30 seconds and timer shows "- -".

### Setting the timer to turn cooking zone off

1. Touch the "cooking zone selection button" to select the cooking zone you wish to set timer for. 
2. Touch the "timer control button" the number in timer indicator flashing. 
3. Then adjust Minute Minder setting by touching the "+" or "-" buttons.  
4. When the minute minder is set, it will begin to count down, and show the remaining time.
5. When cooking timer expires, the corresponding cooking zone will be switch off automatically.